


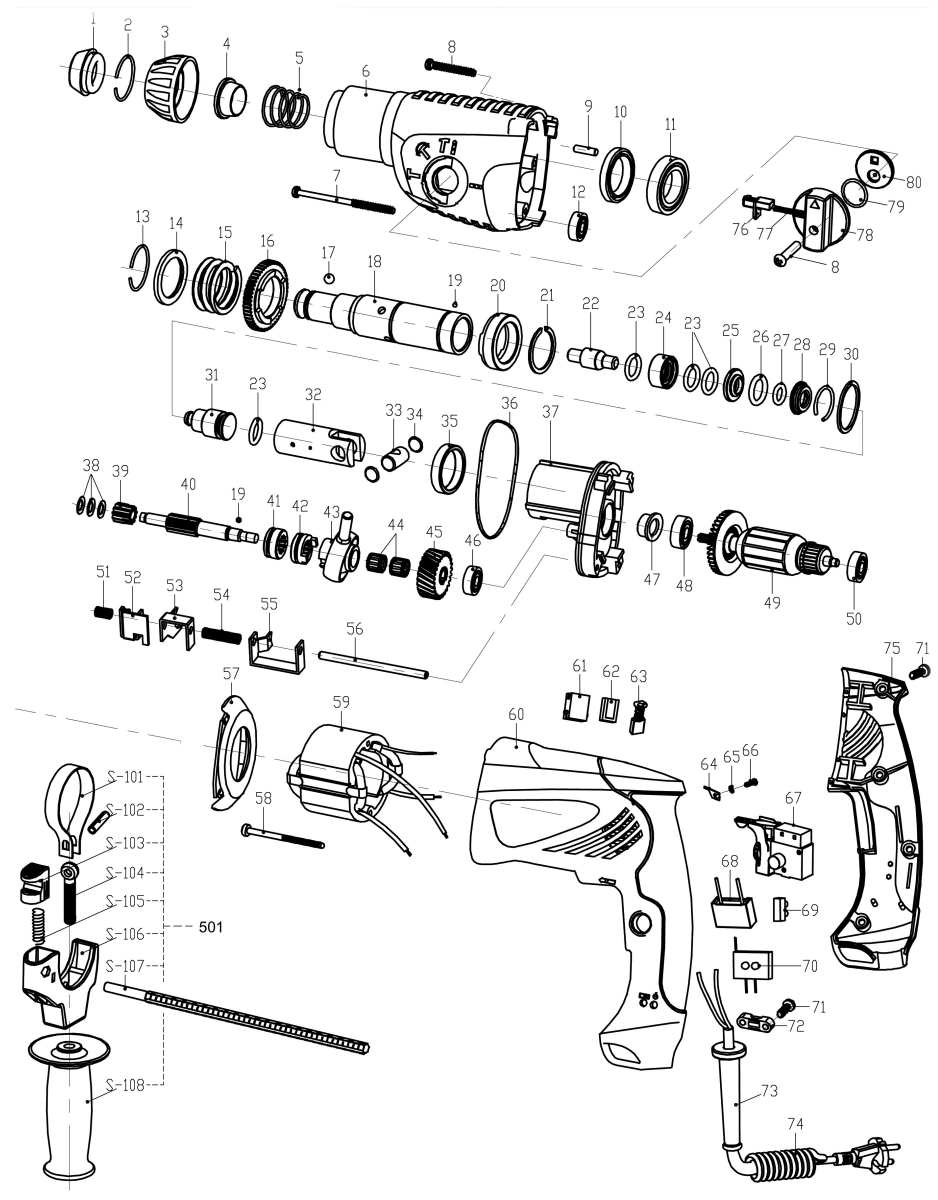

Marka:	TRESNAR
Model:	(4578)

Item No.	Part Name	Item No.	Part Name	Item No.	Part Name
1	Front cover	31	Impact hammer	61	Brush holder
2	Clip ring	32	Aluminum cylinder	62	Brush frame copper pieces
3	Block sleeve	33	Cylinder pin	63	Carbon brush
4	Drill chuck	34	Cylinder head gasket	64	Light contact slice
5	Drill chuck spring	35	Oil bearing	65	Wad
6	Gear box	36	O ring	66	Screw
7	Screw	37	Middle cover	67	Switch
8	Screw	38	Minipad	68	Capacitance
9	Stop pin	39	Pinion	69	Binding post
10	Oil sealing	40	Intermediate shaft	70	Power light
11	Bearing	41	Drill gear clutch	71	Screw
12	Bearing	42	Hammer gear clutch	72	Cable clamp
13	Clip ring	43	Pendulum rod bearing	73	Cable sleeve
14	Torsion spring plate	44	Needle bearing	74	Cable
15	Torsion spring	45	Level 1 wheel	75	Handle cover
16	Big gear	46	Bearing	76	Button
17	Steel ball	47	Oil baffle set	77	Button spring
18	Rotary sleeve	48	Bearing	78	Outer knob
19	Steel ball 3	49	Rotor	79	O ring
20	Torsion clutch	50	Bearing	80	Inner knob
21	Stop block ring	51	Locking plate spring	81	Screw
22	Impact pole	52	Locking plate	501	Auxiliary Handle
23	O ring	53	Drill file spring		
24	Guide sleeve	54	Dial the plate spring		
25	Guide sleeve support	55	Hammer file dial the piece		
26	O ring	56	Guide pillar		
27	O ring	57	Anti-wind ring		
28	Impact hammer set	58	Screw		
29	Round wire snap rings	59	Stator		
30	Clutch small gasket	60	Housing		

Marka:	TRESNAR
Model:	(4578)